




# Greist Buttonholer Fork Arm Spring Replacement

A guide to replace the spring in the fork arm.



Written By: Michael Sykes

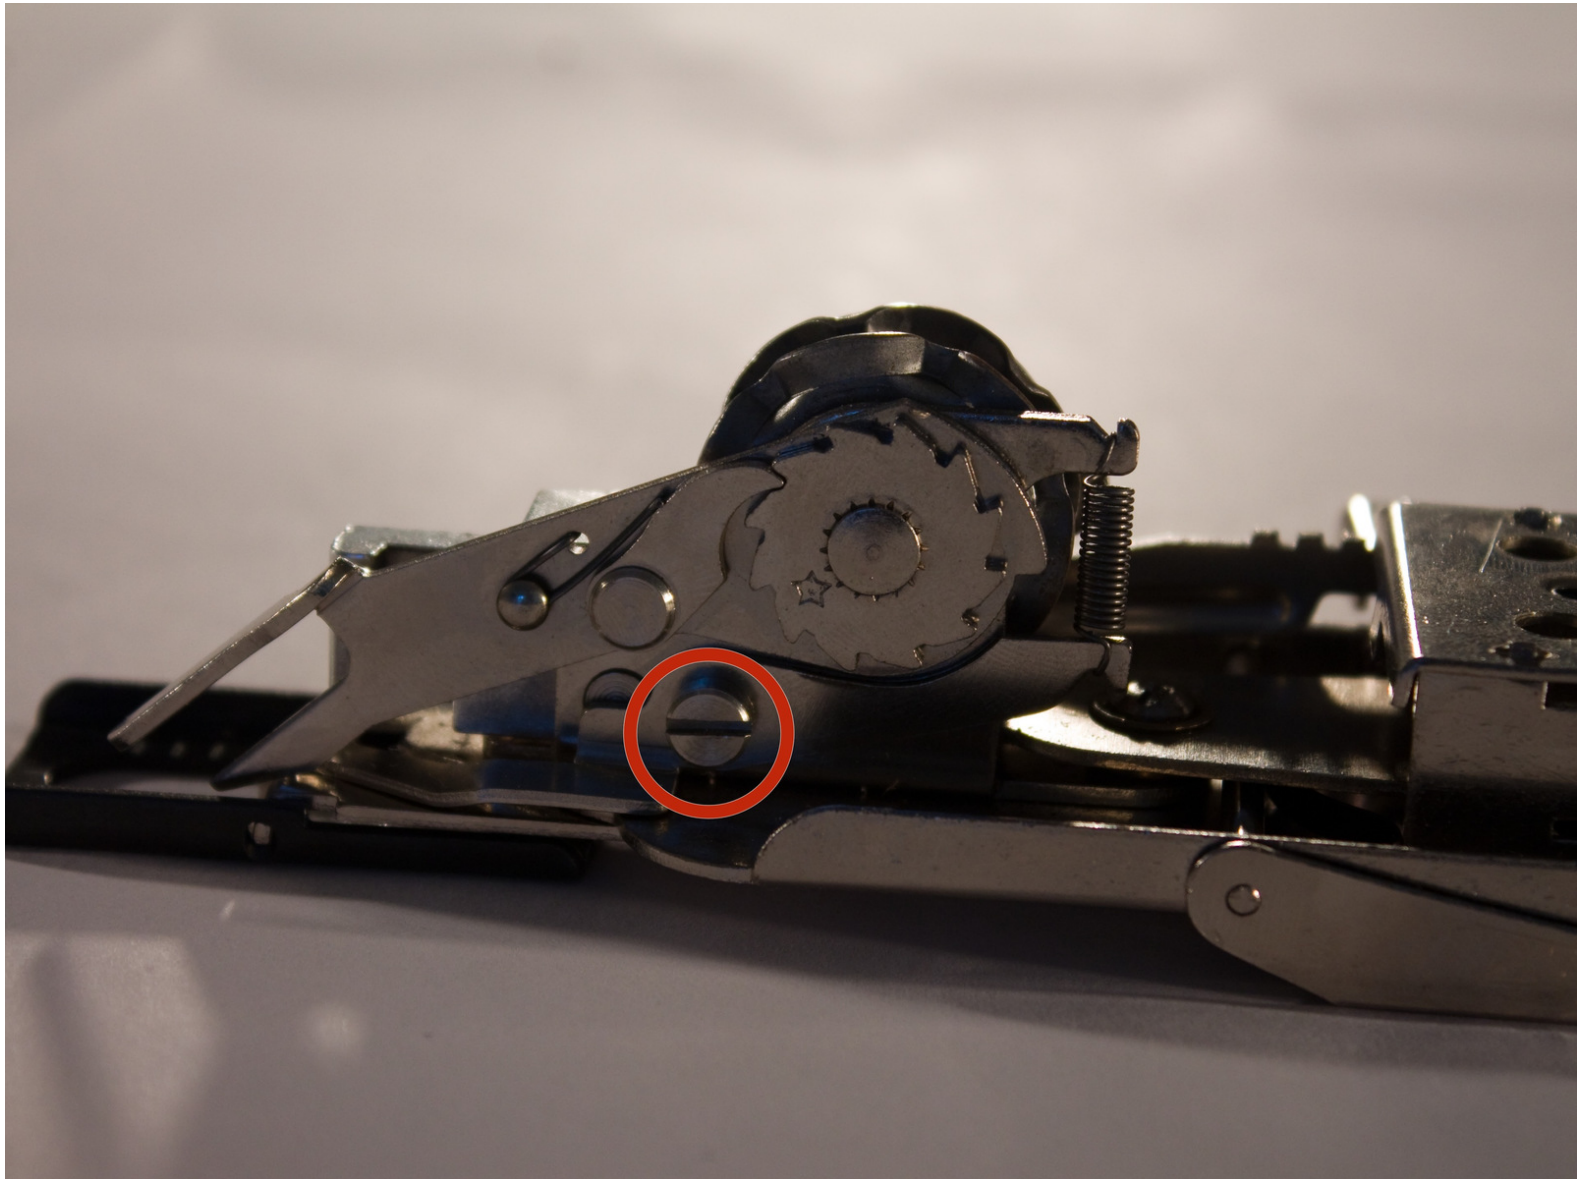

## INTRODUCTION



If the fork arm in The Buttonholer is not moving properly while being operated, chance are you need to replace the spring holding the arm.

## Step 1 — Unscrew the Lower Hook Holding the Spring

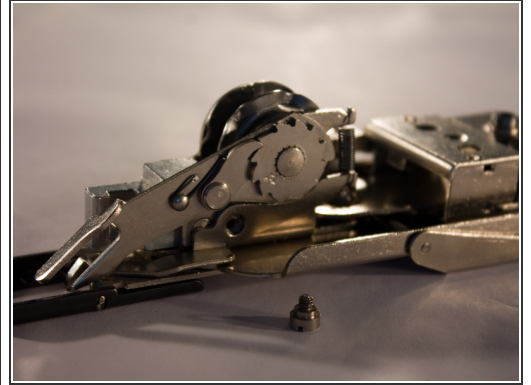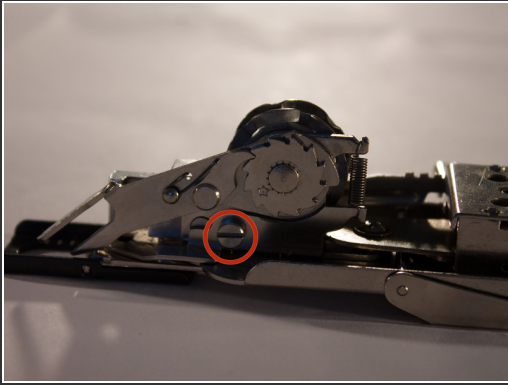

- Unscrew the screw located underneath fork arm using a Flathead screwdriver.

## Step 2 — Remove the Lower Hook

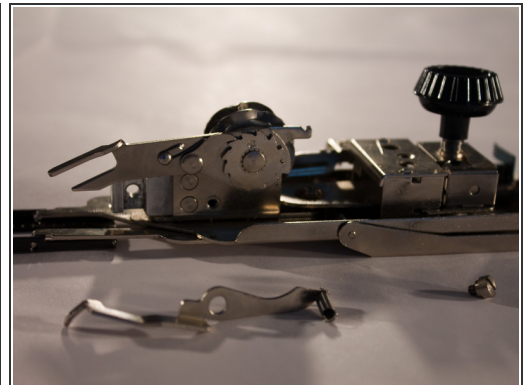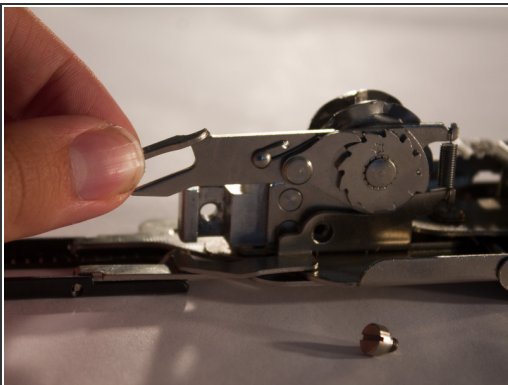

- Raise the fork arm so that it is parallel with the upper hook.
- Turn the lower hook towards you from the bottom, and remove.

## Step 3 — Replace the Spring



- Remove the old spring from the hook.
- Add the new spring to the hook.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 07:43:22 PM.